
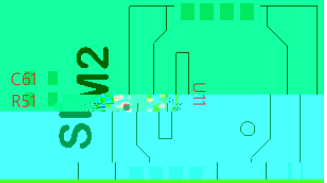
 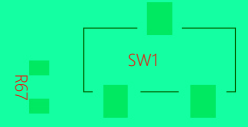


SCK GND
TP44 TP45
R40 TP48
3V3 TP40 PWDN

SDA0 SCL0
Cam_VDD

 

 
USB_ON/OFF

CLK2 DAT2




SD_2_0

SD_VDD

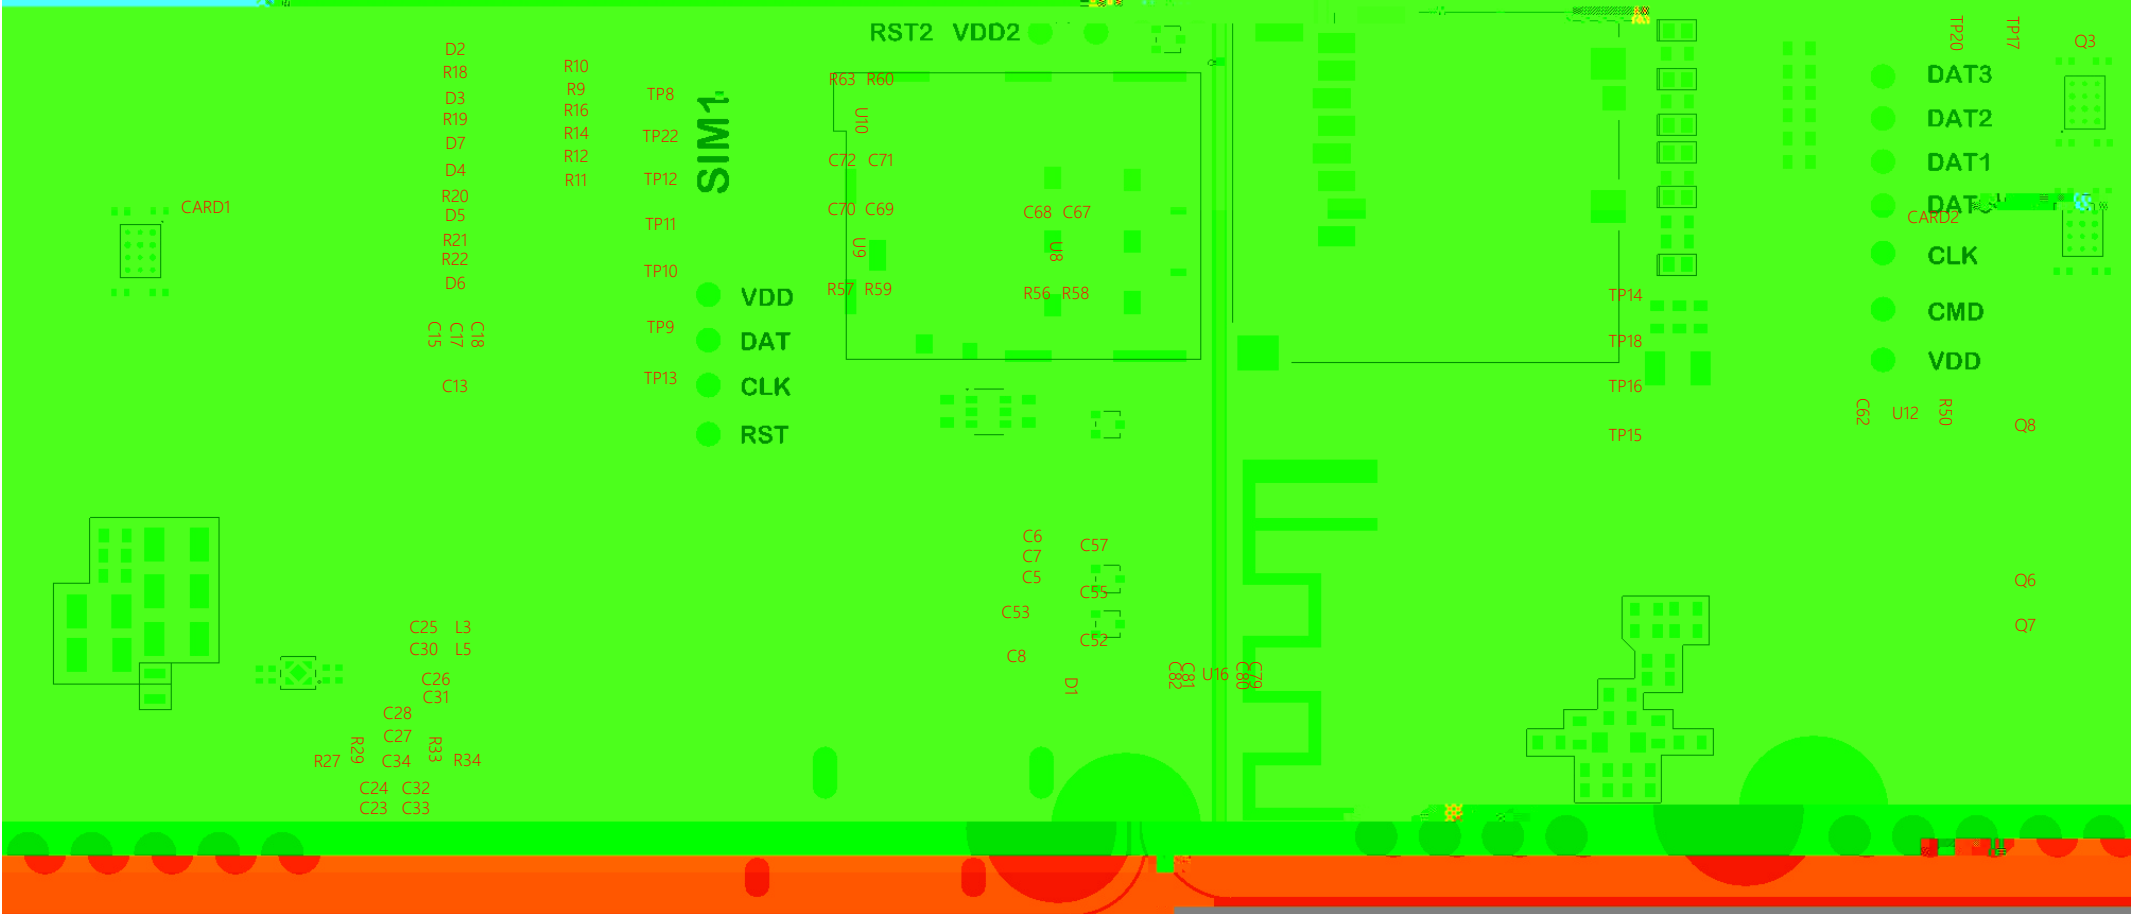




- D2
- R18
- D3
- R9
- R16
- R19
- D7
- R14
- D4
- R12
- R20
- D5
- R21
- R22
- D6
- SD_C18
- SD_C17
- C13
- R10
- R9
- R16
- R14
- R12
- R11

- SIM1**
- TP8
 - TP22
 - TP12
 - TP11
 - TP10
 - TP9
 - TP13
 - VDD
 - DAT
 - CLK
 - RST

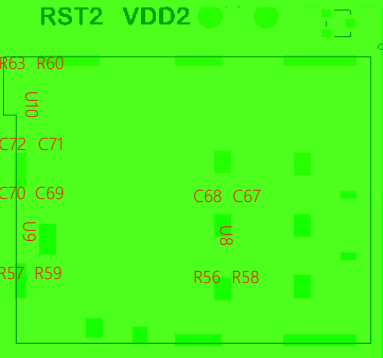

- TP20
- TP17
- Q3
- DAT3
- DAT2
- DAT1
- DAT0
- CLK
- CMD
- VDD
- Q8
- Q6
- Q7

 - C25 L3
- C30 L5
- C26 C31
- C28 R3
- C27 R3
- C34 R34
- R27 R29
- C24 C32
- C23 C33

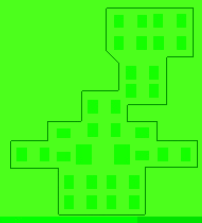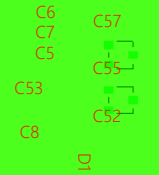

- C62
- U12
- R50
- Q8